



Aleko AC1400

NOTE If powering operator via solar panels, be sure to compensate for the 25mA standby current draw of the CW-INT

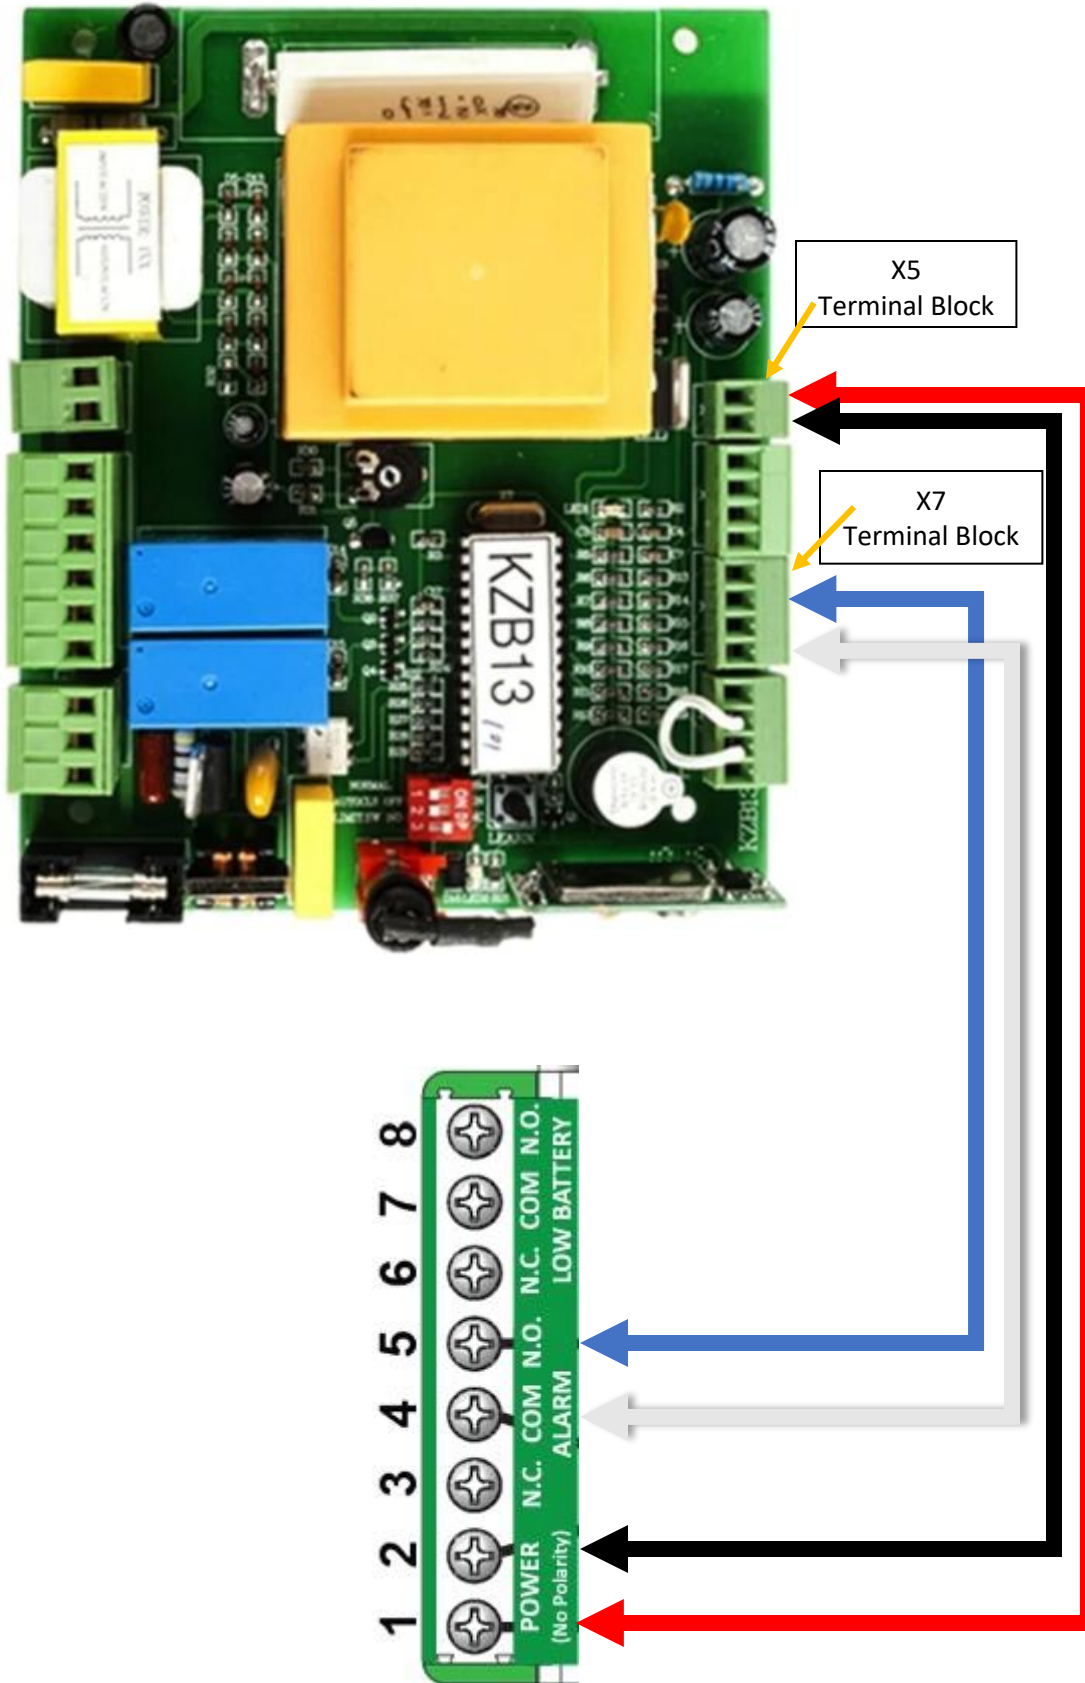

Aleko AS/GG Boards

NOTE If powering operator via solar panels, be sure to compensate for the 25mA standby current draw of the CW-INT

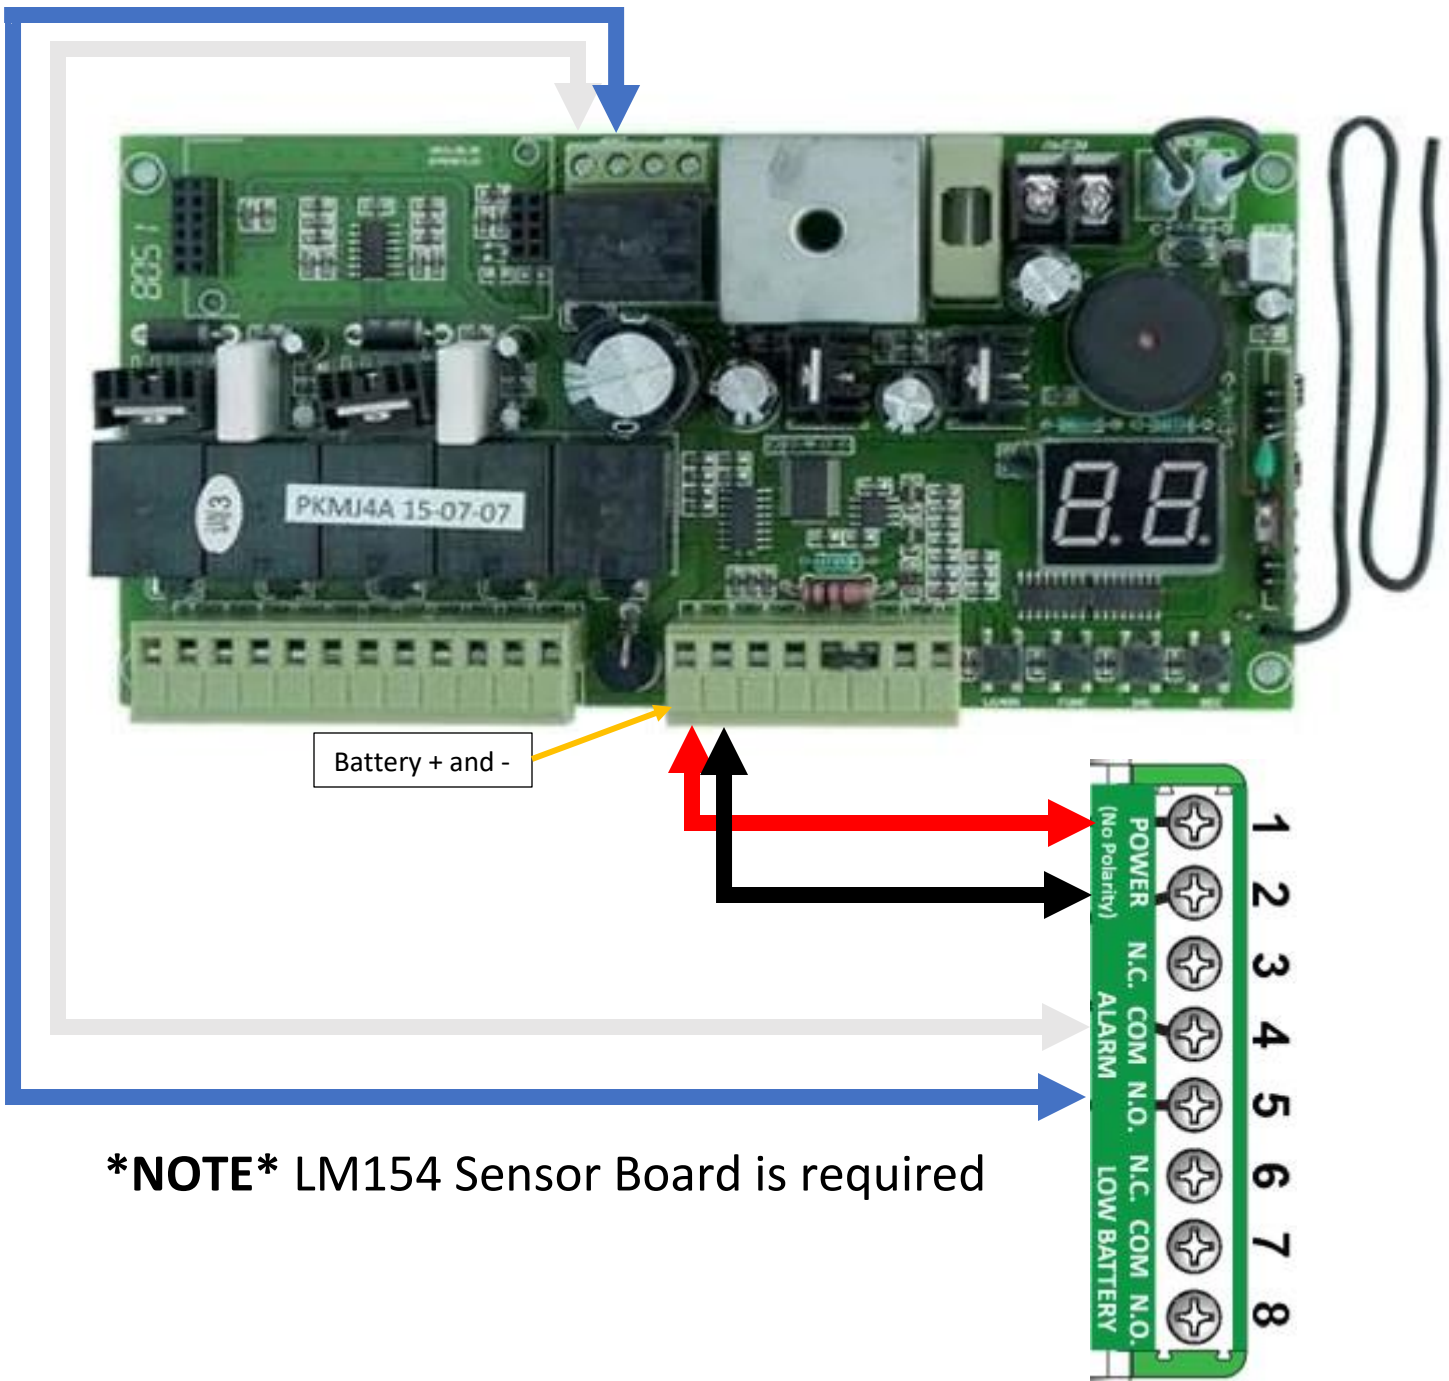

NOTE LM154 Sensor Board is required