

## CP-4 to Amazing Gates 900 HD


Red (+) to Block 2, Terminal 3 - 24VDC+

Black (-) to Block 2, Terminal 4 - GND

Blue Block 1, Terminal 4 - Swipe

White Block 1, Terminal 5 - COM

### AG900HD Control Board Reference Page

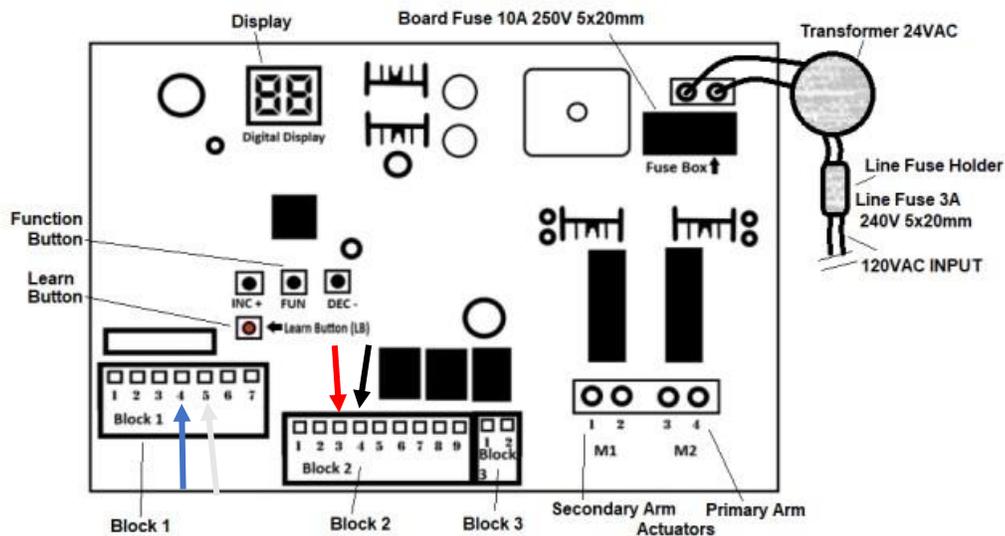

#### Block 1

1. **2SIDE-** for connecting a *Keypad or Intercom* when the gate is a *Double gate*
2. **COM-** for connecting the ground or COM connection of Accessories
3. **1SIDE-** for connecting a *Keypad or Intercom* when the gate is a *Single gate*
4. **SWIPE-** for connecting an *Exit Sensor* to open the gate
5. **COM-** for connecting the ground or COM connection of Accessories
6. **"IR"**- for connecting a *Safety Photo Eye* (Typically the N.O. wire)
7. **12V DC-** output for providing Accessory power (Continuous output current  $\leq 200\text{mA}$ )

#### Block 2

1. **24V+ battery output-** for connecting the Solar/backup battery +
2. **24V- battery output-** for connecting the Solar/backup battery -
3. **24VDC+ output-** for 24V Accessory power (max current output 1A)
4. **GND-** for connecting the common of 24V Accessories and for a grounding rod
5. **24V DC lamp + output-** for connecting a Flashing light +

*The Yellow wire is not used.*