


**CP4 to LA400 Older Model, RSW12U/V Older Model,
LA412s, RSL12VH, GA400/420D**

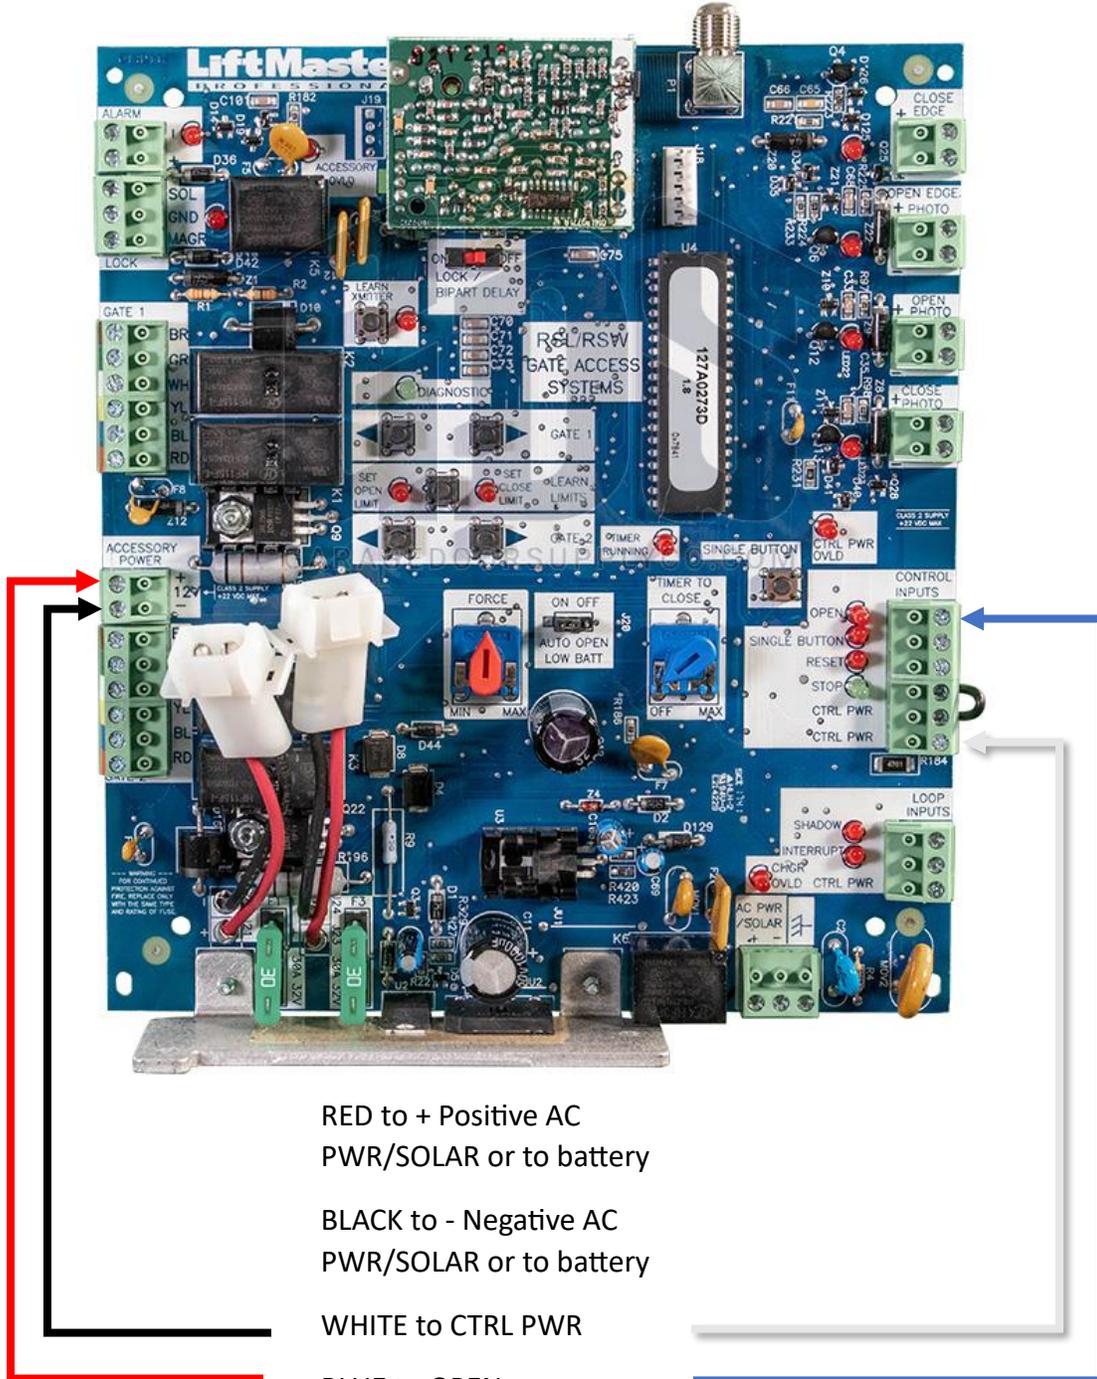

RED to + Positive AC
PWR/SOLAR or to battery


BLACK to - Negative AC
PWR/SOLAR or to battery

WHITE to CTRL PWR

BLUE to OPEN

YELLOW is not used

CP4 to LA-MSWDCBB

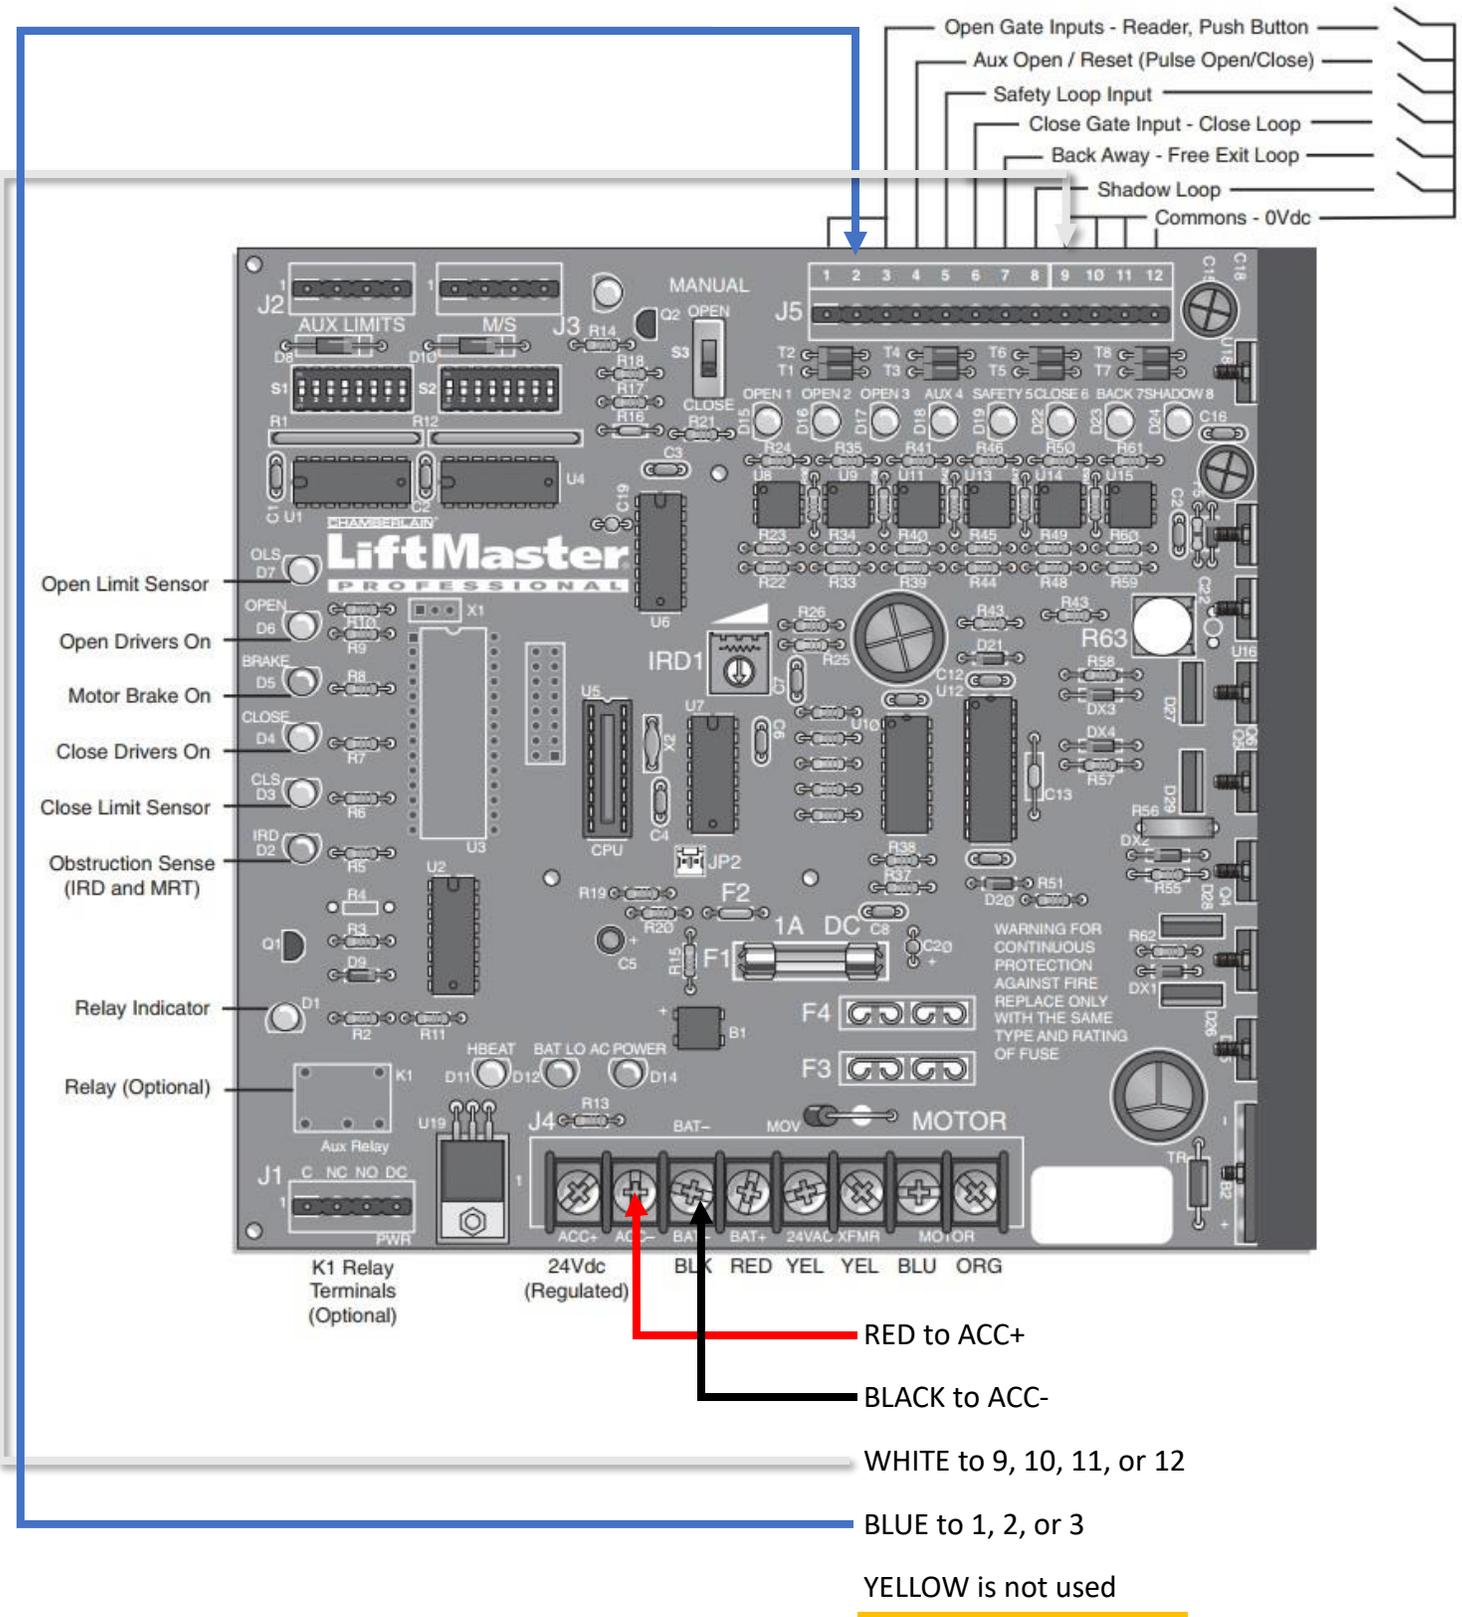

RED to ACC+

BLACK to ACC-



WHITE to 9, 10, 11, or 12

BLUE to 1, 2, or 3

YELLOW is not used

CP4 to Lift Master SL3000UL, CSW200U (2005), ROBOSLIDE, R900

To connect to this board the Elite OmniControl Surge Suppressor is required. P/N Q410

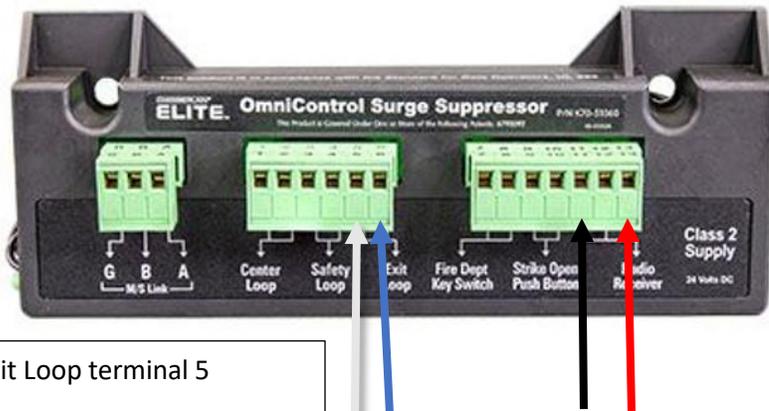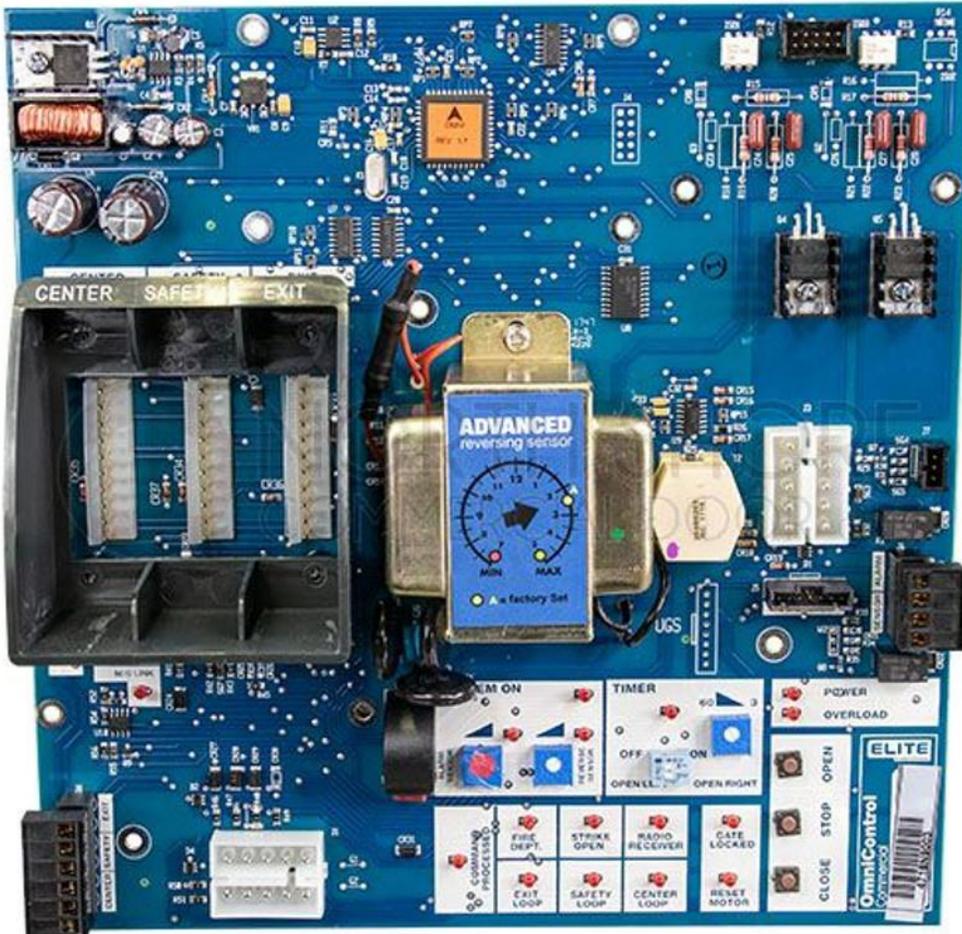

White to Exit Loop terminal 5
Blue to Exit Loop terminal 6
Black to Radio Receiver terminal 11 -
Red to Radio Receiver terminal 13 +
Yellow is not used. —————



3

11

7

8

10

Blue Wire


White Wire

Yellow Wire is not needed!

Black Wire

Red Wire

CP-4 to LA 585 Wiring Diagram

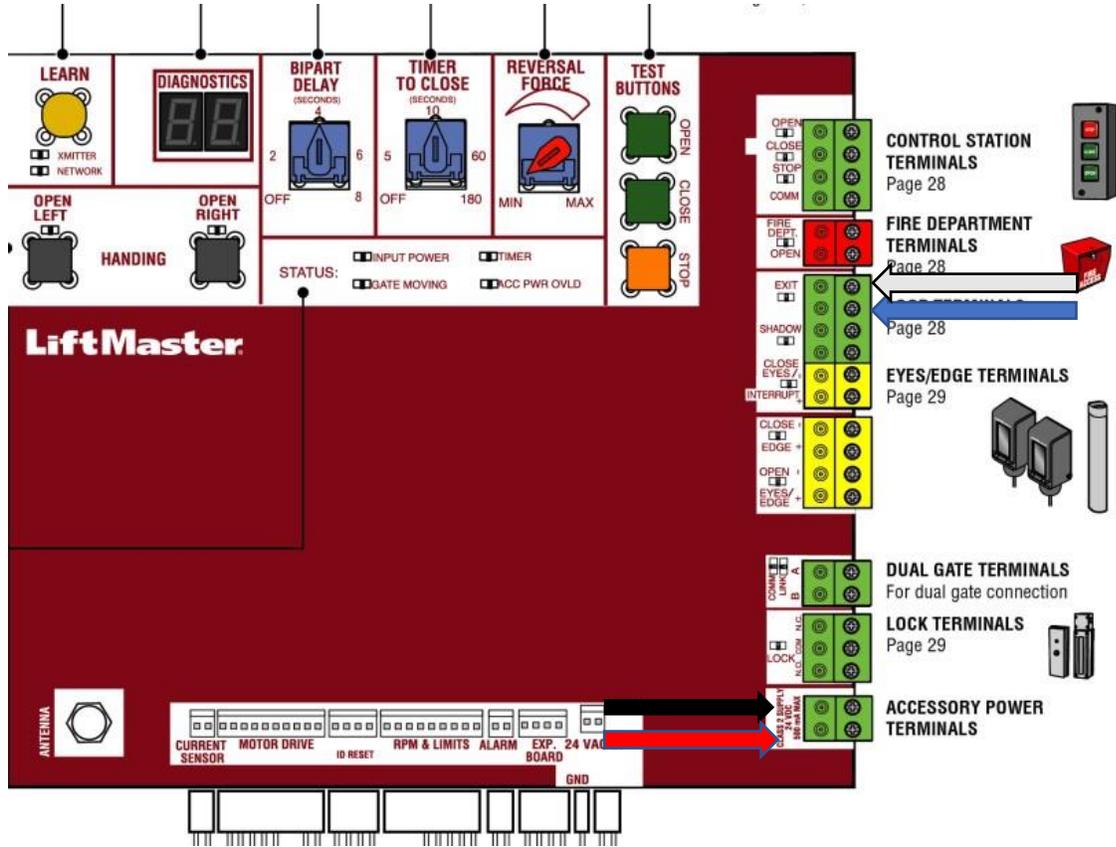

Blue and White on EXIT terminal Block

Red and Black on Accessory Power terminal block (need to observe polarity)

Yellow wire is not used.