

7. SETTING SENSITIVITY

ONLY ADJUST (LOWER) SENSITIVITY IF PUTTING IN MIDDLE OF DRIVEWAY (see #8 below). IN ALL OTHER CASES USE DEFAULT.

SENSITIVITY ADJUSTMENT	
HIGH (Default) Detects vehicle at 5 MPH 12-14' Jumper on #1	 A close-up photograph of a three-pin sensitivity adjustment jumper. The jumper is red and is bridged between pins 1 and 2. The pins are labeled 1, 2, and 3. The word 'Sensitivity' is printed below the pins.
MEDIUM Detects vehicle at 5 MPH 6-8' Jumper on #1&2	 A close-up photograph of a three-pin sensitivity adjustment jumper. The jumper is red and is bridged between pins 1 and 2. The pins are labeled 1, 2, and 3. The word 'Sensitivity' is printed below the pins.
LOW Detects vehicle at 5 MPH 2-4' Jumper on #2&3	 A close-up photograph of a three-pin sensitivity adjustment jumper. The jumper is red and is bridged between pins 2 and 3. The pins are labeled 1, 2, and 3. The word 'Sensitivity' is printed below the pins.

